


# 3M SINGLE BOARD CONNECTION PROFILE TRIM

FIBRE CEMENT LAP RANGE

Designed for holding single fibre cement lap boards inside the reveal, instead of multiple boards in a feather board effect, single board connection trims will provide a professional finish for your fibre cement lap wall cladding project.

# BLACK BLUE LIGHT GREY CREAM SLATE GRANITE WHITE SAGE GREEN


TRIM SPECIFICATIONS	
SKU	(Black) FCTRIMSBBL-P (Blue) FCTRIMSBBG-P (Light Grey) FCTRIMSBWG-P (Cream) FCTRIMSBCW-P (Slate) FCTRIMSBSG-P (Granite) FCTRIMSBPE-P (White) FCTRIMSBWH-P (Sage Green) FCTRIMSBGG-P
Length	3m
Measurements	45mm x 10mm x 8mm
Thickness	lmm
Weight	1.53kg (approx.)

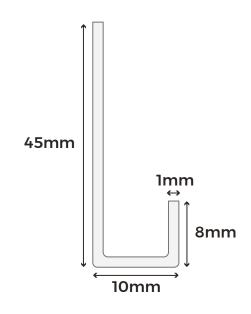


**Please Note:** Images are for illustration purposes only. Actual products may vary slightly from those shown.





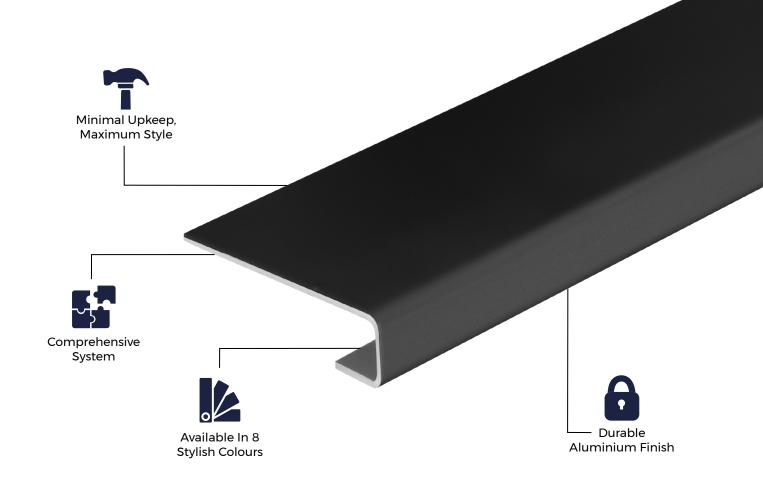

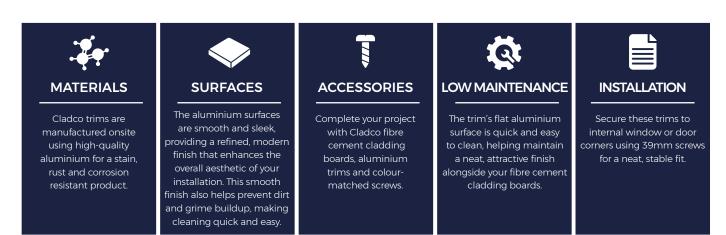

### **EFFLORESCENCE IN FIBRE CEMENT**

Efflorescence is a natural reaction in fibre cement products that can occur when moisture is present on the boards. To minimise this, we recommend storing boards indoors until they are ready for installation. Avoid installing boards while they are wet, as this increases the likelihood of efflorescence.

Ensure proper airflow behind the boards and along the perimeter of the cladding to allow sufficient ventilation. Please note that efflorescence deposits will eventually disappear as wind and rain naturally dissolve them.

# **AFTERCARE**

To keep your fibre cement boards and aluminium trims in pristine condition, clean them periodically using lukewarm, soapy water with a soft cloth or brush. Always use a gentle detergent, and do not use high-pressure cleaning systems.


For marks or scratches that may accumulate over time or during installation, Cladco fibre cement touch-up paint can be used to restore the surface and maintain a flawless finish.






### **INSTALLATION ADVICE**

Alongside the asymmetric external corner trims previously installed around windows and doors, secure connection profile trims to the internal corners of a window or door reveal using 39mm screws, as shown in the diagram. Make sure that the small painted edge of the connection profile trim sits neatly against the window or door frame.

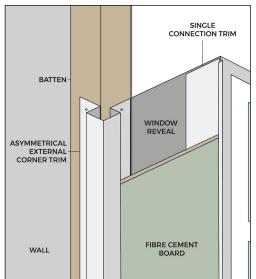

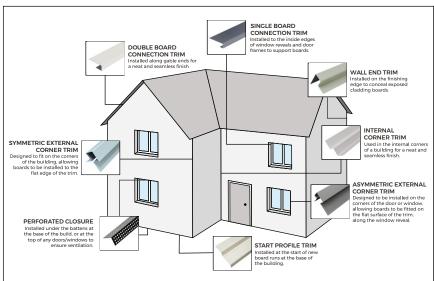

For detailed information about installation, please read our fibre cement lap installation guide.

# **IMPORTANT NOTICE**

When working with fibre cement materials, it is essential to take proper care and follow necessary safety precautions. Cutting fibre cement boards releases fine dust into the air. While the mineral content itself is harmless, inhaling the dust can pose serious health risks.

To protect yourself, always wear a P3-rated respiratory protective mask when cutting fibre cement boards.

# **PRODUCT ACCESSORIES**

