

4.2M & 4.8M C24 TIMBER DECKING JOIST DECKING FRAME



Building the base you need under your timber decking boards wouldn't be possible without using our FSC® Certified timber joists. Used in conjunction with our timber posts, you will be able to create a structurally stable base that lasts. Graded C24 in strength class, our timber decking joists are sawn and green treated with Tanalith 'E' preservative to ensure long-lasting protection from the elements.



MADE FROM SUSTAINABLY-SOURCED WOOD




GREEN TREATED FOR INCREASED PROTECTION FROM THE ELEMENTS



CAN BE USED WITH MULTIPLE DECKING BOARD TYPES

JOIST SPECIFICATIONS

SKU	(4.2m) TIM4710042 (4.8m) TIM4710048
Length	4.2m & 4.8m
Dimensions	47mm x 100mm
Weight	(4.2m) 9.96kg approx. (4.8m) 11.38kg approx.

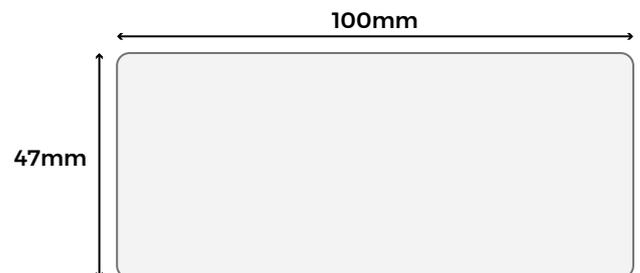

Please Note: Images are used for illustration purposes only, actual item may vary slightly from the image supplied.



Responsibly Sourced Materials



Durable Green Pressure Treated Timber



Multiple Lengths Available



MATERIALS

Cladco timber joists are made from softwood spruce for a timber finish combined with easy installation.



SURFACES

The treated joists have protection against decay and insect attack, to maintain a stable surface for decking to be properly fixed to.



ACCESSORIES

Fixings and clips are available to securely install decking boards, with trims to finish.



RESISTANCE

Graded C24 in strength class, these joists are sawn and green treated with Tanalith 'E' preservative to ensure long-lasting protection from the elements.



EASY TO INSTALL

The softwood spruce of the timber makes using screws and fixings simple and efficient.

INSTALLATION ADVICE

A timber substructure must be installed onto a raised frame over grass, with a weed mat underneath. Timber posts should be secured at a maximum of one-metre intervals around the edges of the frame. The maximum recommended space between joist rows depends on the angle at which you intend to lay your boards in relation to the joists, but should never exceed 400mm, please see diagram.

Apply deck tape to the top surface and cut ends of the timber joists to protect them from moisture. Starter clips need to be fixed to the end of the joists before laying the first board. Place these at the end of each joist, leaving a gap of 15mm between the wall and the starter clip to allow for expansion.



For full installation guidance, please refer to our online decking installation guides.

PRODUCT ACCESSORIES



TIMBER DECKING BOARDS



WEED MAT



T-CLIPS



FRAME PROTECTION DECK TAPE



www.cladco.co.uk

T: 01837 659901 E: info@cladco.co.uk

CLADCO
PROFILES