

3M TIMBER DECKING POST DECKING FRAME



Our 3m sawn green treated timber posts provide robust support for decking frames. Pressure-treated with Tanalith 'E' for durability, they resist decay and weathering. FSC® certified and responsibly sourced, these posts ensure a strong, sustainable foundation for any decking project. Ideal for both professional and DIY use.



MADE FROM SUSTAINABLY-SOURCED WOOD




GREEN TREATED FOR INCREASED PROTECTION FROM THE ELEMENTS



CAN BE USED WITH MULTIPLE DECKING BOARD TYPES

JOIST SPECIFICATIONS

SKU	TIM1001003
Length	3m
Dimensions	100mm x 100mm

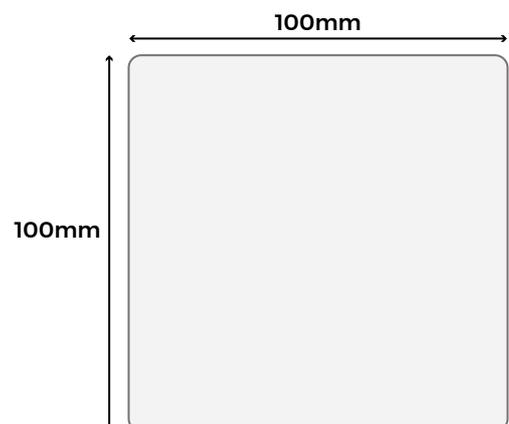

Please Note: Images are used for illustration purposes only, actual item may vary slightly from the image supplied.



Responsibly Sourced Materials



Durable Green Pressure Treated Timber



Ideal For Heavy-Duty Projects



MATERIALS

Cladco timber posts are made from softwood spruce for a timber finish combined with easy installation.



SURFACES

The treated joists have protection against decay and insect attack, to maintain a stable surface for decking to be properly fixed to.



ACCESSORIES

Fixings and clips are available to securely install decking boards, with trims to finish.



RESISTANCE

These posts are sawn and green treated with Tanalith 'E' preservative to ensure long-lasting protection from the elements.



EASY TO INSTALL

The softwood spruce of the timber makes using screws and fixings simple and efficient.

INSTALLATION ADVICE

A timber substructure must be installed onto a raised frame over grass, with a weed mat underneath. Timber posts should be secured at a maximum of one-metre intervals around the edges of the frame. The maximum recommended space between joist rows depends on the angle at which you intend to lay your boards in relation to the joists, but should never exceed 400mm, please see diagram.

Apply deck tape to the top surface and cut ends of the timber joists to protect them from moisture. Starter clips need to be fixed to the end of the joists before laying the first board. Place these at the end of each joist, leaving a gap of 15mm between the wall and the starter clip to allow for expansion.



For full installation guidance, please refer to our online decking installation guides.

PRODUCT ACCESSORIES



TIMBER DECKING BOARDS



WEED MAT



T-CLIPS



FRAME PROTECTION DECK TAPE



www.cladco.co.uk
T: 01837 659901 E: info@cladco.co.uk

CLADCO
PROFILES